## 如何迁移 FushionHub 的 license 到新的 VM 上面



本教程将指导您如何迁移 FusionHub 的 License Key 到新的 FusionHub 虚拟机上

Version 1.1 2016-10-28 深圳市三原石科技有限公司



## 1、获取现有设备的 License

打开现在 FusionHub, 点击 System>License

peplink	Dashboard Setup Wizard Network	System Status	Apply Changes			
System						
Admin Security	License Information					
Firmware	License Key	АААААААААААААААА	АААААААААААААА			
Time	Serial Number	1111-1111-1111	1111-1111-1111			
Email	License Type	Full	Full			
Notification	No. of Peers	5	5			
Event Log	Max. Bandwidth	25Mbps	25Mbps			
SNMP						
<ul> <li>InControl</li> </ul>						
<ul> <li>Configuration</li> </ul>						
<ul> <li>License</li> </ul>						
<ul> <li>Reboot</li> </ul>						
Logout						

请记录好您的 License Key

2、关停现在的 VM 机器



请关闭现在的 FusionHub 机器

3、在 InControl2 上释放 License

记录下的 License Key 之后,登录到 InControl2 管理界面,点击 your organization name > Organization Settings > Warranty & License.



	Groups Ccean Ventures
	Organization Level
+ Add Devices	🔯 Organization Settings 🔸
😑 Device Management	
🔅 Create Group	🗸 Ocean Ventures
📒 Group Management	
📒 Operation Log	
organization Settings	
📒 Warranty & License	

找到对应的序列号一行并在最后点击红色按钮"Release"。

		Organizat	tion Level 0	cean Ventu		rganization Settings	Warranty &	License	>	
Overview 🔅 Or	ganization Settii	ngs						Groups	Ocean Ventures	
Warranty Status										
ilters:										
ALL	•									
Product	0 Name	Name			Warranty / Subscription Expiration Date				Date of Sale 0	
Peplink FusionHub	1111-11	11-1111 (1	111-1111-1111)		2016-01-08 2015-01-08				2015-01-08	
Peplink FusionHub	2222-22	22-2222 (22	222-2222-2222)		2019-04-14 2014-04-15					
							First Prev	/ious	1 Next Last	
FusionHub License	Serial Number	Max. Peers	Max. Bandwidth (Mbps)	License Type	Activation Date	Evaluation Expiry Date	Warranty Expiry Date	Last Update	Release d License Key (?)	
AAAAAAAAAAAAAAAAA	1111- 1111-1111	5	25	FULL	2015-02- 11	-	2020-01-29	2015-02 11	Release	
BBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBBB	2222- 2222-2222	5	25	FULL	2015-02- 11		2016-02-10	2015-02 11	Release	
mport FusionHub License Download Latest FusionHut	a		Impor	t Creat	e Evaluation Lic	cense				

4、添加 License 到新 VM 上

将你的新 FusionHub 开机,运行设置向导(Setup Wizard)。当提示输入 License Key 的时候,只需要输入之前释放病记录的 License 号码即可。

市三原石	科技有限公司	Π
eplink Setup	Dashboard Setup Wizard Network System Status	Apply Changes
Logout	Setup Wizard > License > License Activation	
	License Information License Key	2
		Submit

到这里,您就已经成功的把 License Key 成功的迁移到新的 FusionHub 了。

peplink	Dashboard	Setup Wizard	Network	System	Status	Apply Changes	
WAN Setup	Setup W Set	izard > License > :up has been comp as been applied, Fi	License Ac	tivation sfully! II reboot in	10 seconds.		